

Printer Driver Installation

- Do not connect an Ethernet cable to or power on the laser system at this time otherwise unexpected results will occur.
- Attached to the inside rear cover of this manual you will find a CD-ROM that contains the XL Series Print Driver and Firmware. Place this CD into your computer's CD-ROM drive.
- Using Windows Explorer, locate and double click on file xlinst.exe
- The installation software will execute and the ULS Network Printer Installation dialog box will appear. Remove the checkmark in the "Install Printer Firmware" checkbox so that ONLY "Install Printer Driver" is checked and click Next.
- Select which XL Series Model Printer you wish to install and then click Next.
- You will be prompted to enter the network address for your printer. Choose between DHCP (Server Assigned IP Address) and IP Address (manually assigned IP Address). If you do not know which one to choose, contact your network specialist.
- If choosing DHCP, choose a network ID from the dropdown list and then click Next. However, if choosing an IP Address, select IP Address, enter a Printer IP Address, and then click Next.
- The printer driver files will now be copied to your computer's hard drive. Once it finishes, click the Finish button to complete the installation.