


R100 - Rear Cover

Table of Contents

1. Make sure the VLS is powered OFF and unplugged.

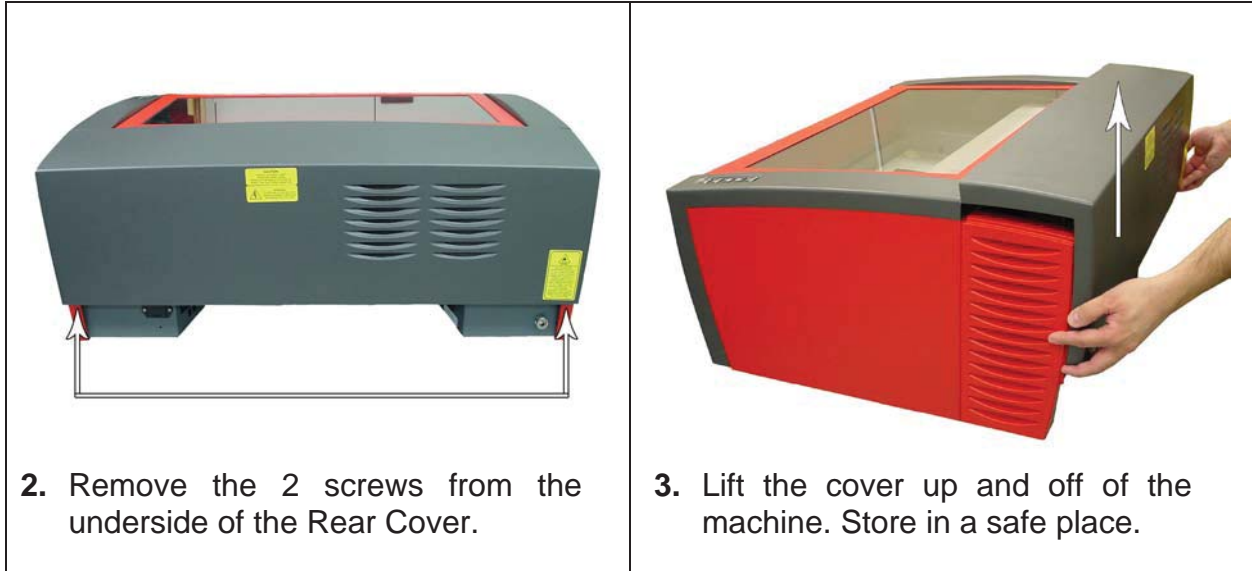


4. Installation is opposite of removal.

R500 - Laser

Table of Contents

Note: Handle the laser with **care**. Do not bump or jar it.

1. Make sure the VersaLASER is powered OFF and unplugged.
2. Remove the [Rear Cover](#).

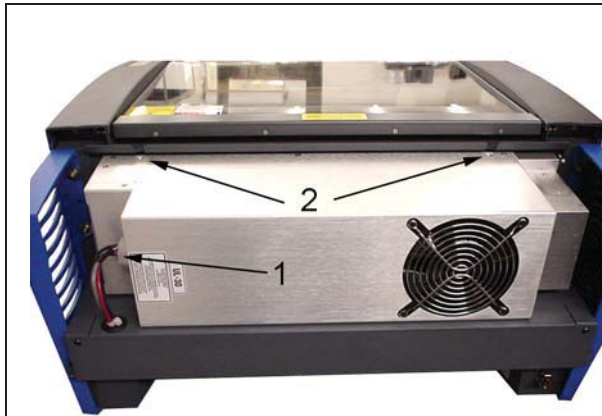

3. Unplug the white electrical connector (1), from the Laser, by squeezing its locking tabs and pulling it to the left. Remove the 2 screws (2) that attach the Laser to the frame.



4. Rotate the laser, a few degrees, from the bottom and lift it up and off the mounts. Store the laser in a safe place.

5. Installation is opposite of removal.