


To re-flash the CPU follow these instructions.

Look for the two gold jumper pins located near the round silver battery. The two gold pins are labeled as J3 on the circuit board. See picture for pin location.

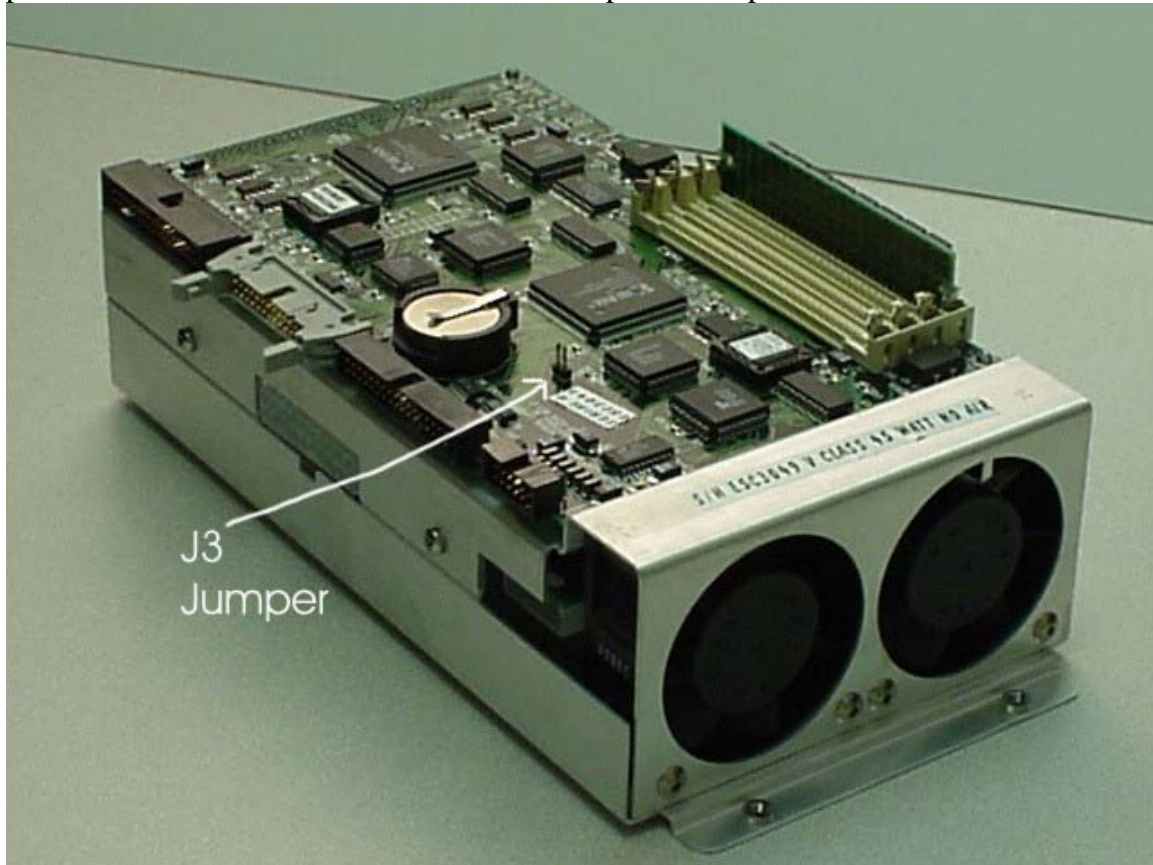

When you locate the J3, the two jumper pins, with the machine off jumper the two pins together. You can use a coin or small paper clip or whatever is handy and available to jumper the two pins together. Once you have the two pins shorted together turn the laser system on. Let the machine Initialize completely to the point that the display says Ready. When it reaches the Ready state, turn the laser system off. Remove the jumper from the two pins, and then wait 15 seconds. Turn laser system back on and laser system should be completely re-flashed at this time. Run the file you are trying to run and see if problem has been resolved.