


# Removing the Upper Flex Board

**\*\*\*IT IS NOT NECESSARY TO REMOVE THE ARM FOR THIS PROCEDURE\*\*\*  
\*\*\*\*\*THIS IS JUST SHOWN FOR CLARITY\*\*\*\*\***

This procedure shows how to remove the Upper Flex Board by removing the heatsink module:

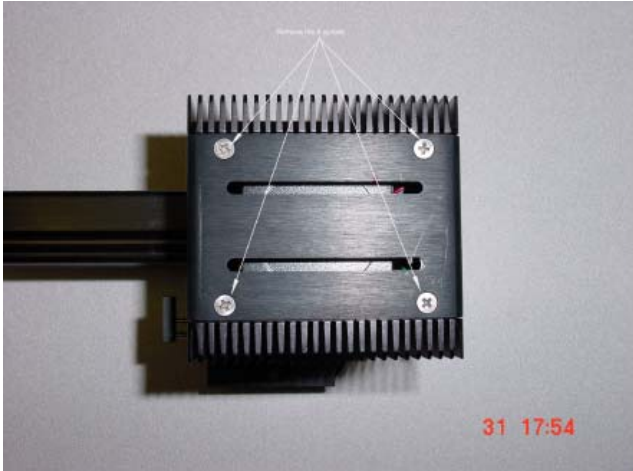

Remove the 4 screws shown in Figure 1. Remove the 2 screws shown in Figure 2, you will find 2 additional screws on the opposite side.

Remove the 3 screws shown in Figure 3. Remove the connector shown in Figure 4.

