


Z-Axis Motor Removal



When performing this procedure, make sure that you do not accidentally turn the Z-Axis Lead Screws that drive the table up and down; otherwise you will need to re-level the table later on!

1. Turn ON and lower the engraving table all the way down by either using the keypad.
2. Once the engraving table has been lowered power OFF and unplug the system.

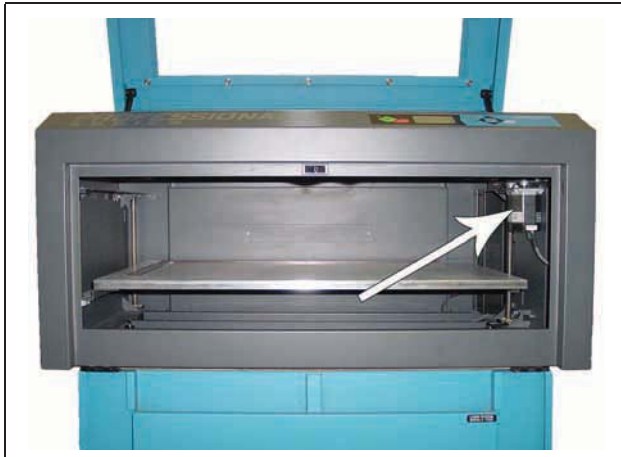

3. The Z-Axis Motor is located inside of the system on the right hand side. Gently pull on the white and red electrical connector.



4. Hold the Z-Axis Motor while unscrewing the 3 screws that hold the Z-Axis Motor in place. Set the screws and washer aside in a safe place.

5. Once the motor is free, tilt the motor and remove it from the small Z-Axis Belt.

6. Pull the motor to the right to re-apply tension to the belt while tightening the 3 screws.