

EVENT LOG

1. Start Engraver
2. Open VNC
3. Type Password: ulsxl
4. Press Q on your keyboard to stop system.
5. In VNC choose the Window Icon (Start).
6. Go to Program Files / ULS / Event.Log.
7. Scroll down to the end, what do the last few lines read?