

### **Copely Motion**

1. Boot Engraver.
2. Open RunUltra@VNCViewer.
3. Enter IP Address
4. Enter password: ulsxl
5. Press Q on your keyboard.
6. When VNC Viewer opens, select the Windows Icon (start).
7. Select ULS from the ADMIN folder.
8. Using the up folder go to C:\Program Files\Copely Motion
9. Double click CME2.
10. Double click CME2.EXE.
11. You are now in Copely Motion Software. Click OK

### **PIN UP Mode**

1. Open VNC
2. Type IP address of your engraver.
3. Type password (ulsxl).
4. When VNC opens press the letter H on your keyboard.

### **EVENT LOG**

1. Start Engraver
2. Open VNC
3. Type Password: ulsxl
4. Press Q on your keyboard to stop system.
5. In VNC choose the Window Icon (Start).
6. Go to Program Files/ULS/Event Log.
7. Scroll down to the end, what do the last few lines read?