

XLS Embedded PC – Driver

Steps 1 through 3 not applicable on a first time install.


Step 1 – Desk/Remote computer. Delete the shared printer in printers & devices.

Step 2 – Desk/Remote computer. Uninstall the LSM

Step 3 – Embedded/Local computer. Uninstall the LSM.

Step 4 – Embedded/Local computer. Install the LSM.

Step 5 – Embedded/Local computer. Share the printer – this should be done by default but you can double check. Go to printers & devices and right click on the XLS printer icon, the click on **Printer properties**. When the properties window loads, click on the **Sharing** tab to verify that the sharing is checked:

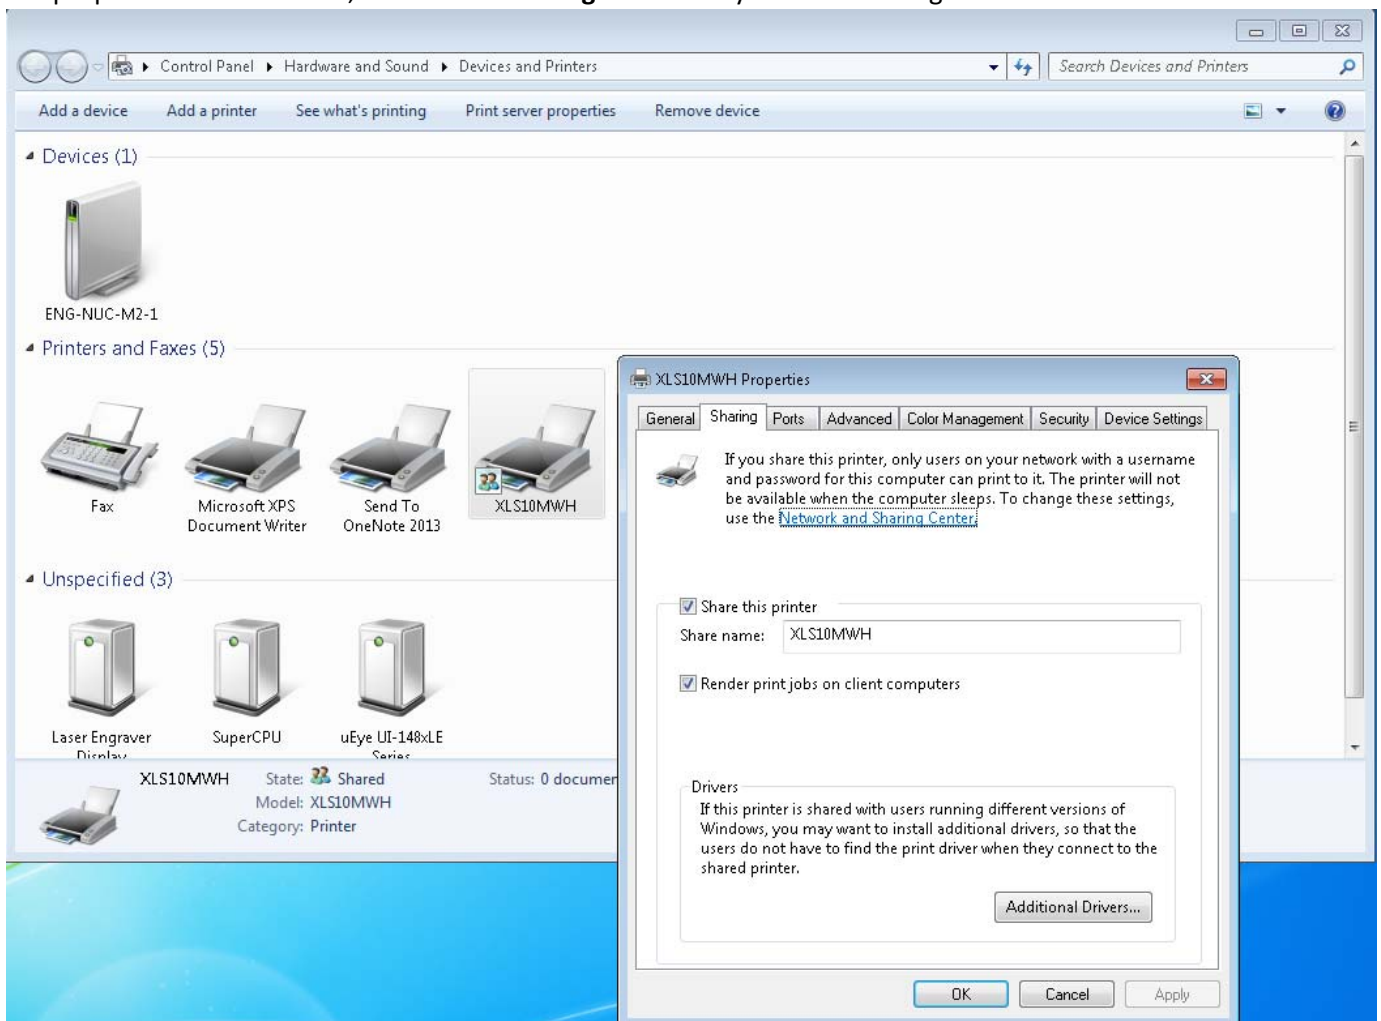


Step 6 – Embedded/Local computer. This is optional but at this point, I verify the basic functionality of the LSM locally. If it doesn't work here, it won't work on the remote/desk computer.


Step 7 – Desk/Remote computer. Install the LSM.

Step 8 – Desk/Remote computer. Open the printers & devices folder and delete the XLS printer.

Step 9 – Desk/Remote computer. While still in printers & devices, click **Add a printer** and when the Add Printer window opens, select **Add a network, wireless or Bluetooth printer**:

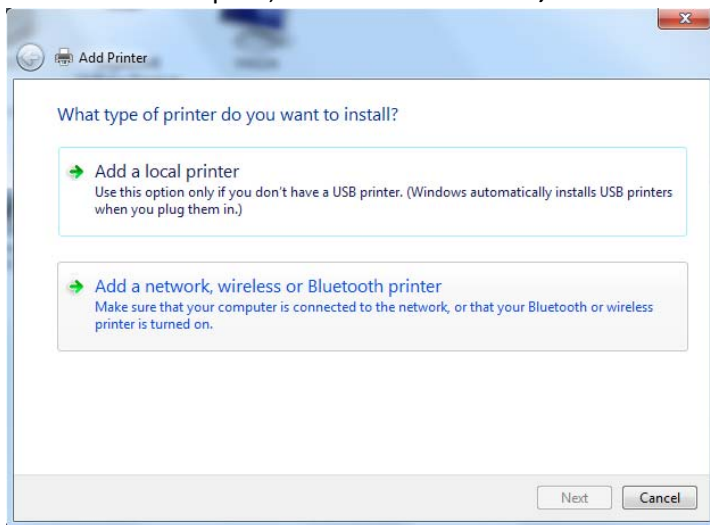

Next, click **Select a shared printer by name** and enter the computer name\printer name. In this example, yours will be different, I am adding a shared printer called XLS10MWH that resides on a computer named eng-nuc-m2-1:

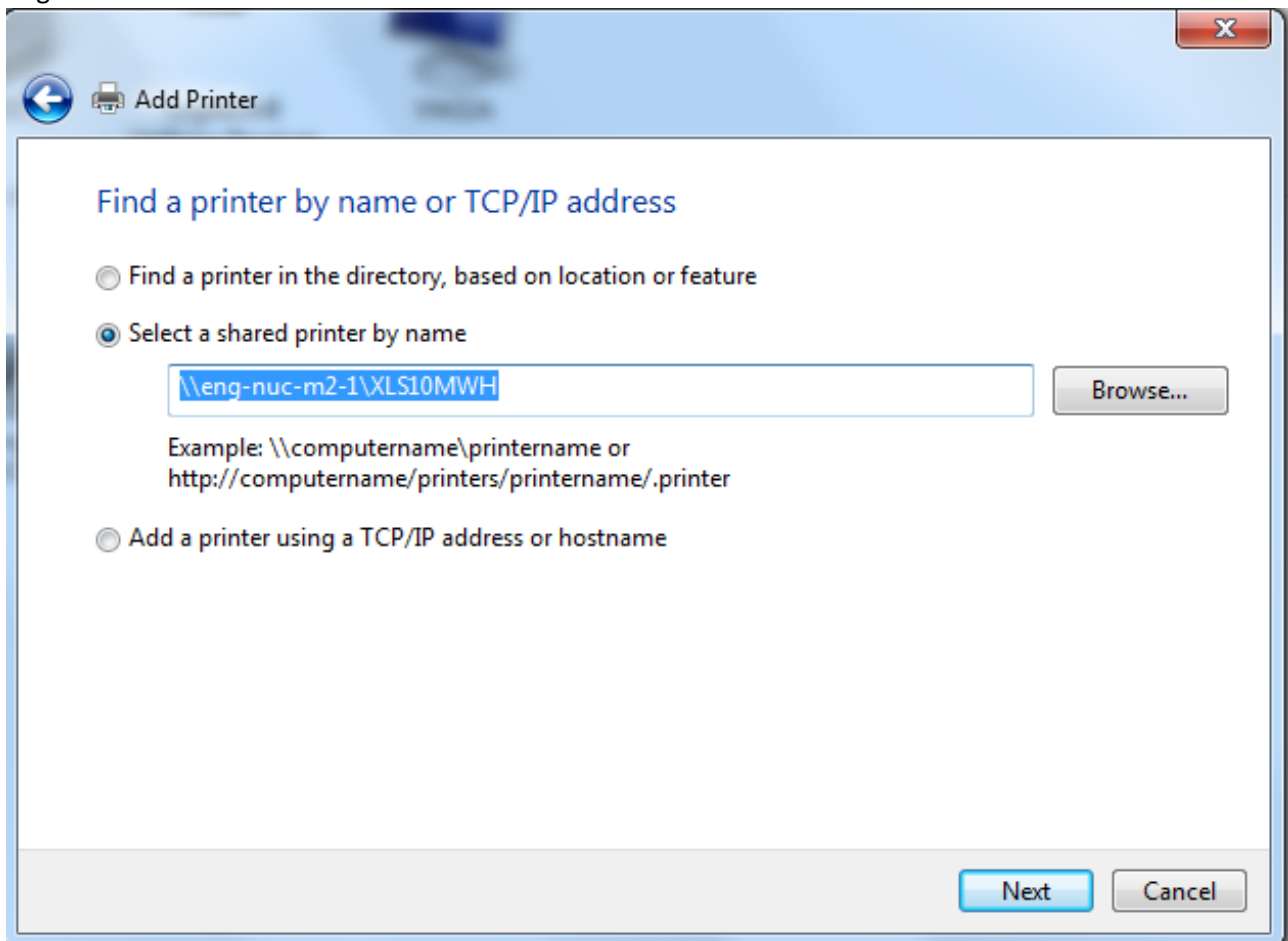

Click **Next** to finish out the **Add Printer** wizard and everything should work ok after this.