

PLS - 5vDC Laser Modulation: *On the CPU.*

- Ensure all doors are closed.
- Using a multi-meter set to DC Voltage, check 5vDC when system is Idle:
 - Test each laser connection (MTOP & MBOT) separately.
 - Pair each Red Lead with the Black Lead (ground)
 - **Black** Lead - TP23 (ground)
 - **1 Red** Lead - MTOP (test first)
 - **2 Red** Lead - MBOT (test second)
- Acceptable voltage is 5vDC. If it is not, contact Support at 480-609-0297 or support@ulsinc.com

