

PIN UP Mode

1. Open VNC
2. Type IP address of your engraver.
3. Type password (ulsx1).
4. When VNC opens press the letter H on your keyboard.
5. Pin Up Delay (15.0msec). Increase or decrease vector to vector travel speed.