

**Air Assist**

Air OFF in the printer driver but, turned ON using the system display BEFORE start mark is pressed. You WILL have air to the cone.

Air OFF in the printer driver but, turned ON using the system display AFTER start mark is pressed. You WON'T have air to the cone.

If air is ON in the printer driver but, turned OFF using the system display BEFORE start mark is pressed. You WON'T have air to the cone.

If air is ON in the printer driver but, turned OFF using the system display AFTER start mark is pressed. You WILL have air to the cone.