

Auto Z

On / Off: Allows Z height to be programmed in the printer driver.

1. Enable the Z Axis in the printer driver.
2. Using the slide scale in the printer driver set material thickness.
3. Press set in the printer driver.
4. Table will lower to the edited Z height before mark starts.