

Keypad Error

1. Disconnect power to the system.
2. Remove rear cover.
3. Move the USB keypad as described below.

