

Setting Max Z Height

1. Open VNC, type password uslx1 and press ok.
2. Press the letter Z on your keyboard; you will see a window for Z height. The Z axis will lower to home position.
3. DO NOT CHANGE SCREENS, using the up arrow move Z axis upward, stop when table nearly comes into contact with the collision detectors.
4. In VNC press SAVE.
5. Close VNC.
6. Home Z axis table, go to motion menu and move Z table upward until table stops by itself. Table should be in same position as step 3.