



Air Assist Cone Installation

Step 1: Remove the cover from the focus carriage by removing the 6 thumbscrews. Place cover in a safe location.

Step 2: After removing the cover, insert the Air Assist Cone from the bottom. The cone is self aligning and can only be installed in 1 direction. The cone is held in place with a thumb screw. When cone is in place, it should look like this.

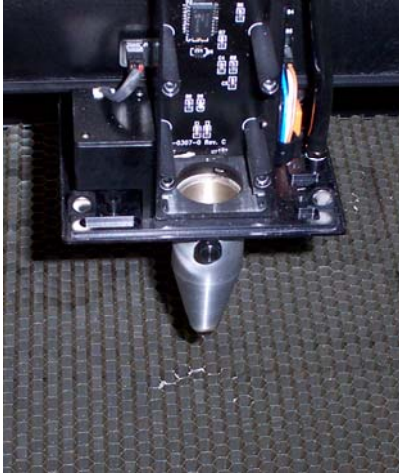

Step 3: Connect air tubing located on the right side of the cone to the barbed fitting attached to the focus carriage plate.

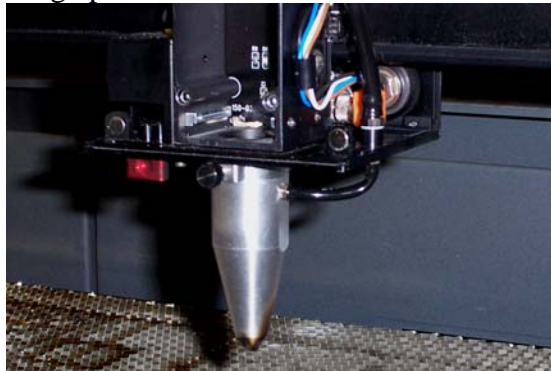

Step 4: Reinstall your cover removed in Step 1. Remember to remove Air Assist Cone when not using air assist. Failing to do so will cause damage to focus lens.