

Instructions for Setting Windows 7 Power and Screen Saver

DISTRIBUTION: Global


The following process is used to turn off Windows 7 Power Save & Screen Saver. When the Power and Screen Savers are not turned off, the USB signals will be interrupted causing the ULS machine and the computer to loose communication. The following screen shots and instructions show how to set up the Power and Screen Savers so there is no interference. If you have any questions regarding this Technical Service Bulletin please contact ULS Technical Support.

Step 1 – Go to the Control Panel in Windows 7.




TSB25_061011

Step 2 – Type “Power Save” in the search box in the upper right corner of the window. Next, click on the “Edit power plan” link.

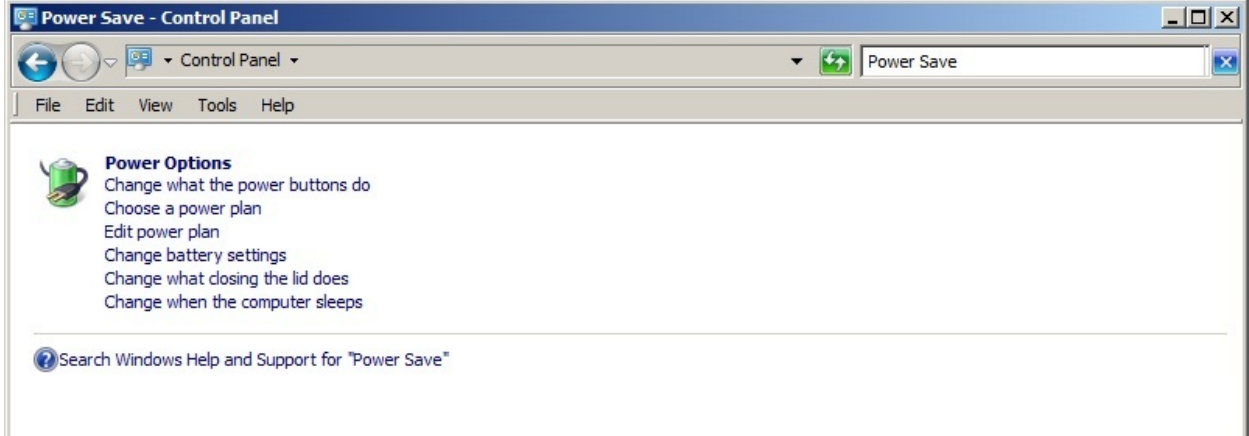


Step 3 – Set all settings to “Never”.

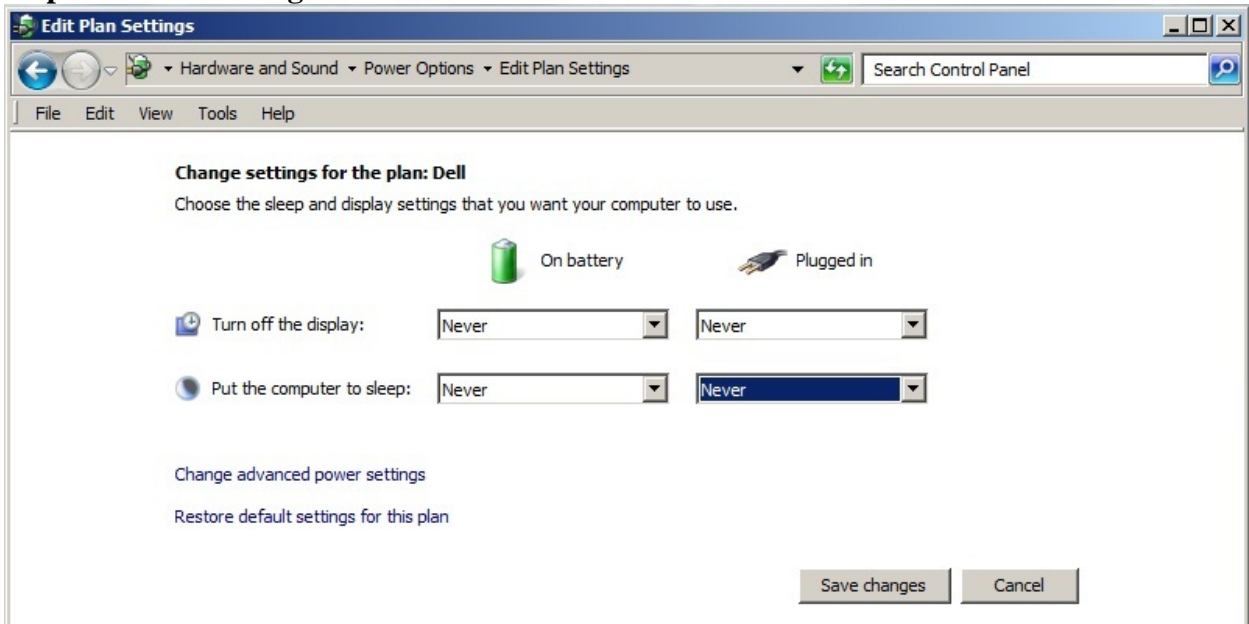


TSB25_061011

Step 4 – Click “Change advanced power settings” – the window below opens. Click the + sign by “Hard disk” to expand the hard disk settings. Make sure every available setting under “Hard disk” is set to “Never” then click “Apply”.

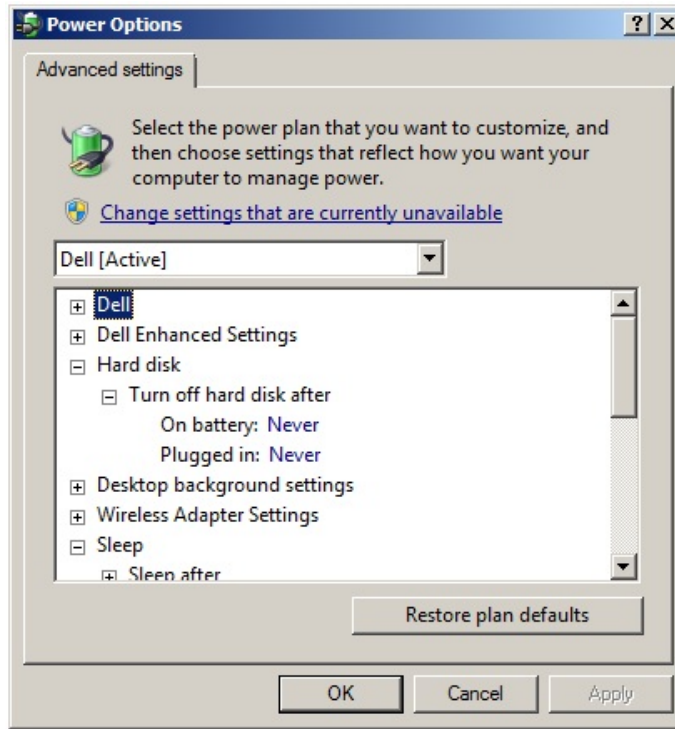


Step 5 – Next, scroll to “Sleep” and expand all the + signs to show all sleep settings. Make sure all are set to either “Never” or “Off” and then click “Apply”.

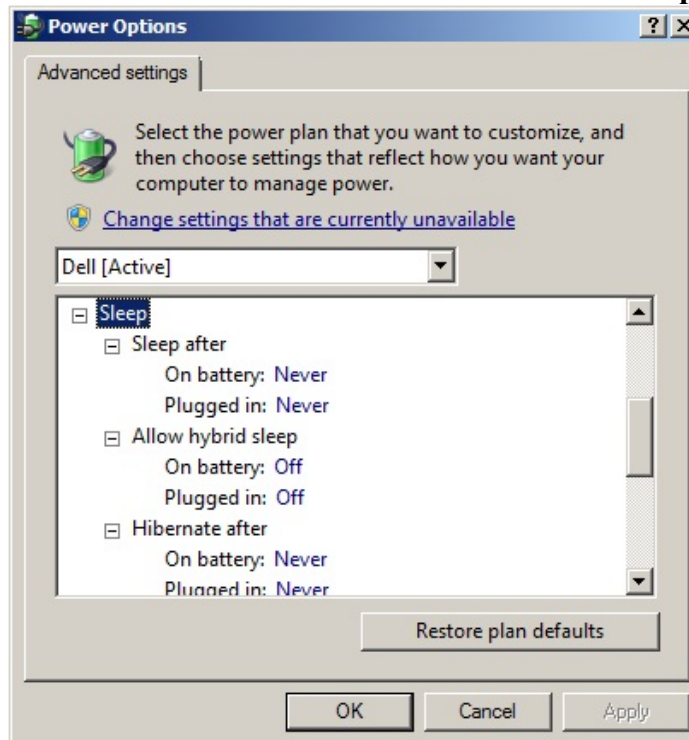


TSB25_061011

Step 6 – Next, scroll to “USB settings” and expand all the + sign to show all USB settings. Set both to “Disabled” and then click “Apply”. Click OK to close this window and then close the Control Panel.

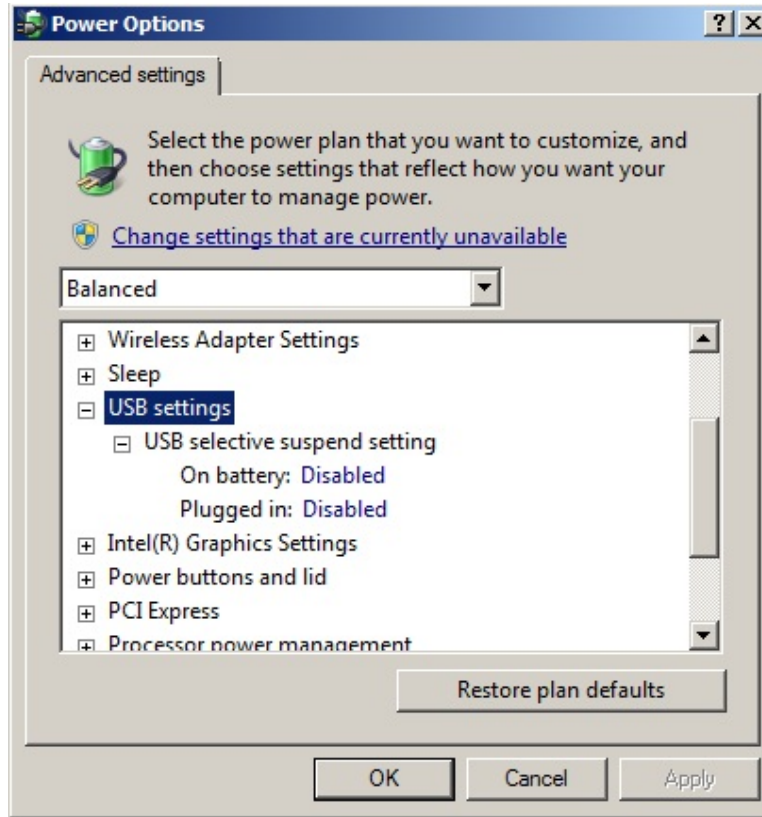


Step 7 – Reopen the Control Panel in Windows 7.

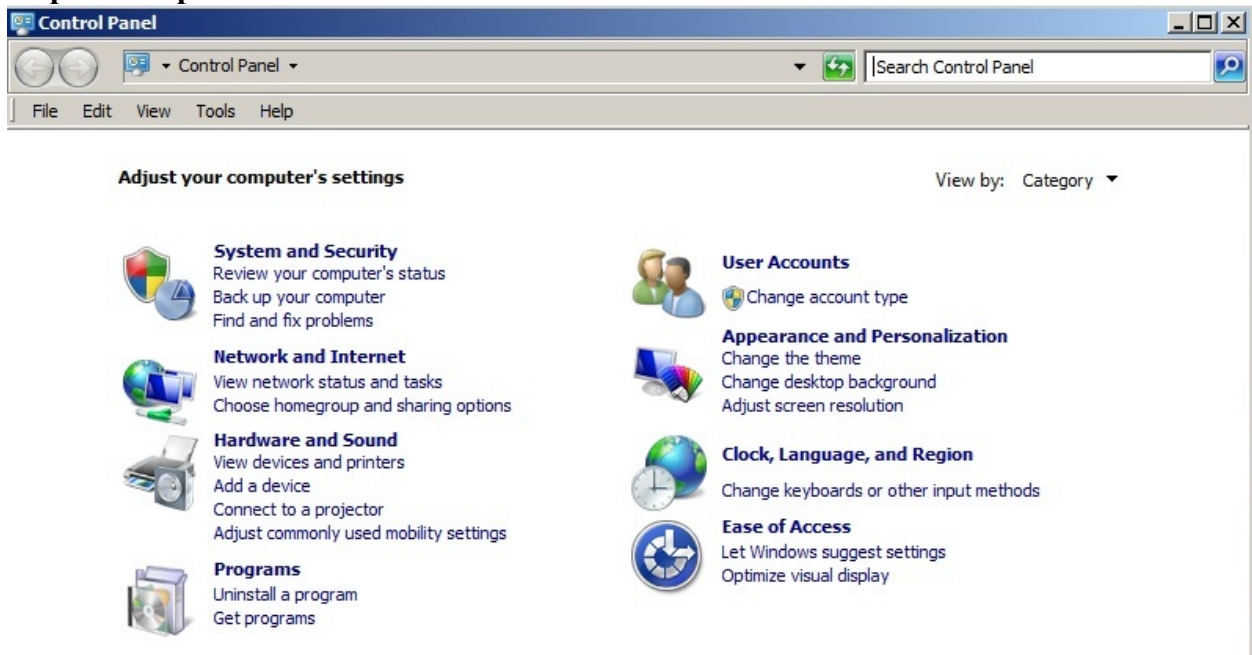


TSB25_061011

Step 8 – Type “Screen Saver” in the search box in the upper right corner of the window. Next, click on the “Turn screen saver on or off” link.

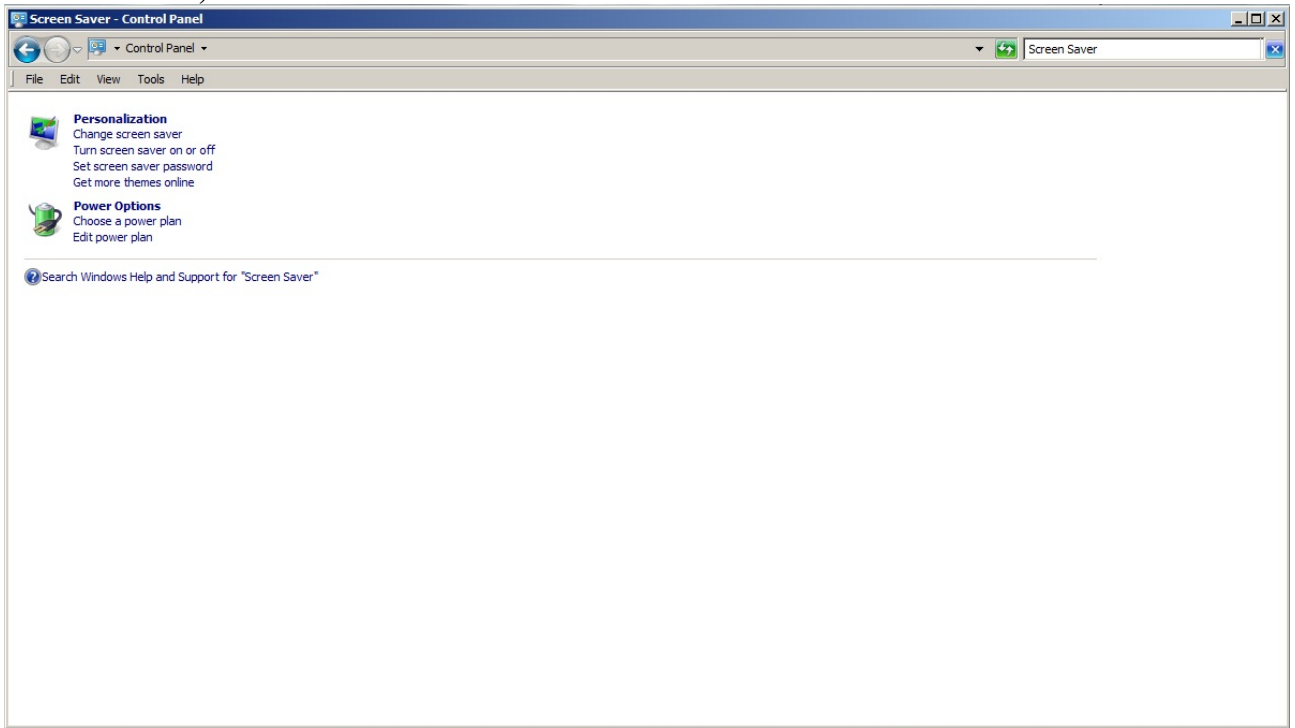

Step 9 – Set the Screen saver dropdown to “(None)” then click “Apply” to save the change. Click OK to exit.

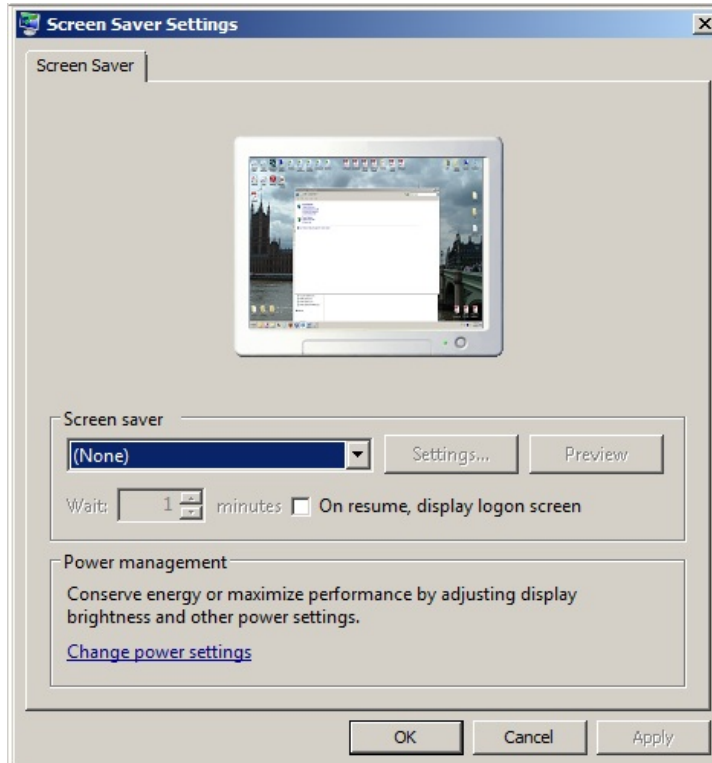

TSB25_061011